

# SERVICING YOUR POOLCLEANER™ (REMOVAL OF OBSTRUCTION OR TURBINE VANE REPLACEMENT)


**BEFORE YOU DO ANYTHING, TURN THE PUMP OFF. SUCTION CAN BE DANGEROUS!!!**

**1** Remove the POOL-CLEANER™ from the pool, making sure to place the hoses straight. Separate the POOLCLEANER™ from the Leader Hose.

**4** Remove the Turbine Cover. The Turbine Cover fits tightly so you may have to wiggle it a little. If need be remove the vanes by sliding them out horizontally. Should there be any obstruction remove it.


When you reinsert the vanes make sure that they fold forward, toward the front of the cleaner (the grill). Also make sure that you don't insert the worn side of the vanes into the turbine hub as this would cause them to fall out.

F  
R  
O  
N  
T

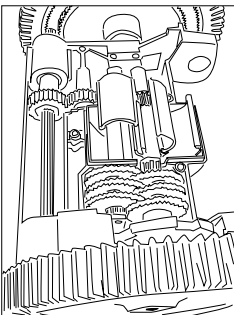


**2** First we will check to see if anything is clogged inside the POOL-CLEANER™. Rotate the RIGHT FRONT wheel forward (the grill is the front). If it won't move there is an obstruction. If it moves smoothly there probably is no obstruction.

F  
R  
O  
N  
T

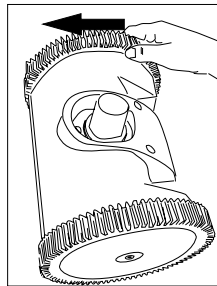

**3** Place the cleaner on a work surface. You will need a Phillips screwdriver. Remove the three screws that hold the Shroud (Top Cover), and Remove the Shroud. Set the screws and Shroud aside.

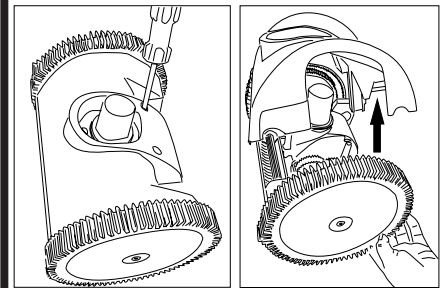

**5** Replace the Turbine cover making sure it is on correctly. Now visually inspect the rest of the cleaner removing any debris that may be in the gears, drive shafts etc. **BEFORE PLACING THE SHROUD BACK ON REPEAT STEP 2 (turning the right wheel) to make sure the POOLCLEANER™ runs smoothly. If it doesn't turn you may have replaced the vanes incorrectly.** Place the Shroud back onto the POOLCLEANER™ making sure its on correctly. Drop the three screws into the screw holes and secure.

